



# How to clean the Magnavox MWD200F optical lens

This guide will show you how to clean the optical lens inside the DVD player.

Written By: Brian





## TOOLS:

- [Cotton Swabs](#) (1)



## PARTS:

- [High Content Rubbing Alcohol](#) (1)



## Step 1 — How to remove Magnavox MWD200F cover




- Using a Philips screwdriver, remove the two screws on the top of the device, towards the back.

## Step 2




- Remove the plastic cover by pulling up on the back and away from the faceplate.

## Step 3

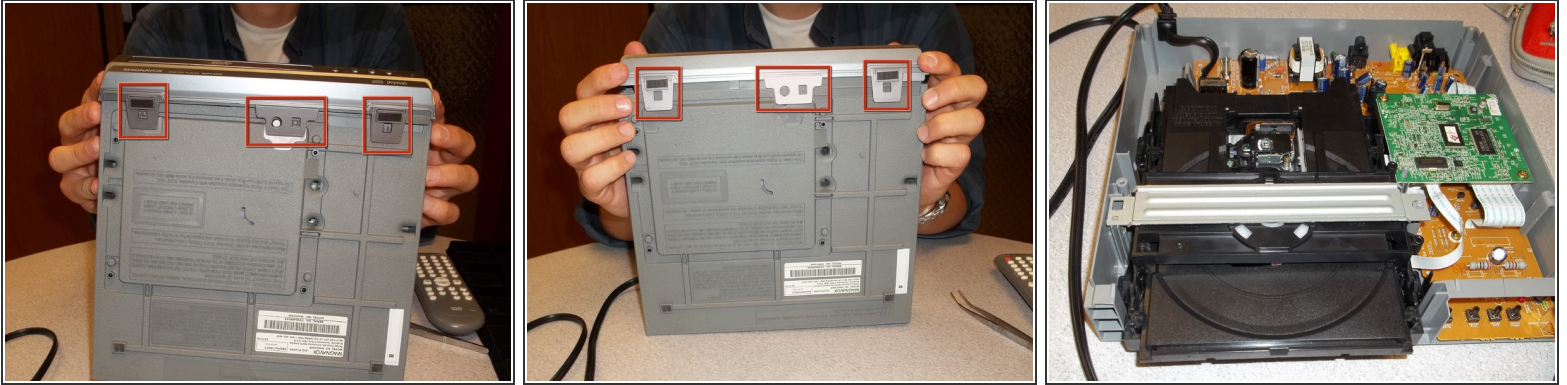

- Remove the face plate by unclipping the latches on the bottom of the device. Once it's unlatched, simply pull the face plate off.

## Step 4 — How to clean the Magnavox MWD200F optical lens

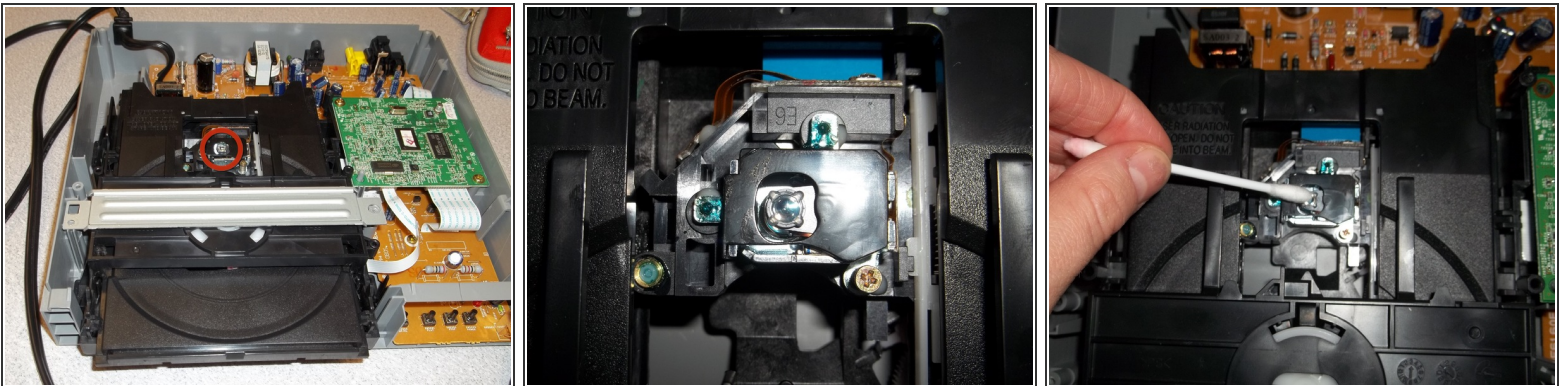

- Locate the optic lens in the middle of the disc drive. Dip a cotton swab in rubbing alcohol and use it to lightly wipe the lens. After the lens is clear of dust and debris, wait a few minutes to let it air dry.

This document was last generated on 2017-07-05 02:19:29 PM.